


This document will explain how to upgrade the firmware of an RL1. Please get the latest version from JGR Optics.

For more information, please visit <u>www.jgroptics.com</u> or email <u>support@jgroptics.com</u>





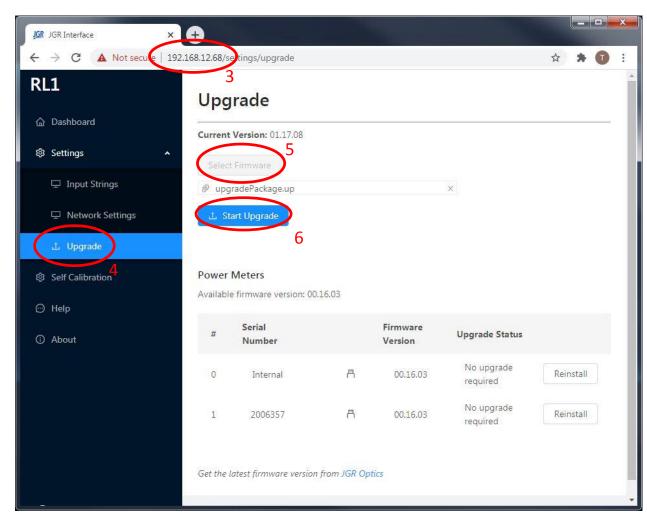


- 1. Power on the RL1 and connect to a LAN via Ethernet.
- 2. On a PC or tablet on the same network, open a web browser (recommended: *Google Chrome* or *Firefox*).
- 3. Enter the IP address in the web browser of the RL1 (visible on the RL1's touchscreen *Setup* page).
- 4. Go to the *Upgrade* tab.
- 5. Select the firmware file provided to you by JGR Optics.
- 6. Click Start Upgrade.




#### WARNING: Do not interrupt the upgrade process until it is complete.

If the RL1 is turned off or the webpage is refreshed/disconnected, it may corrupt the RL1 which will require it to be sent back to JGR.



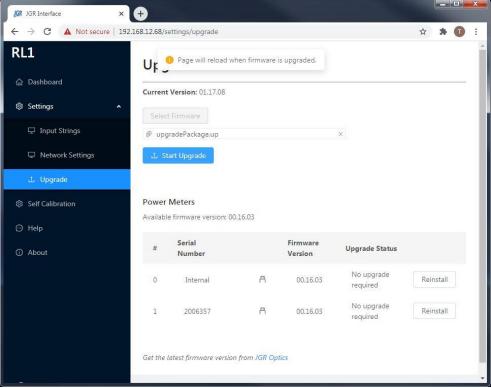



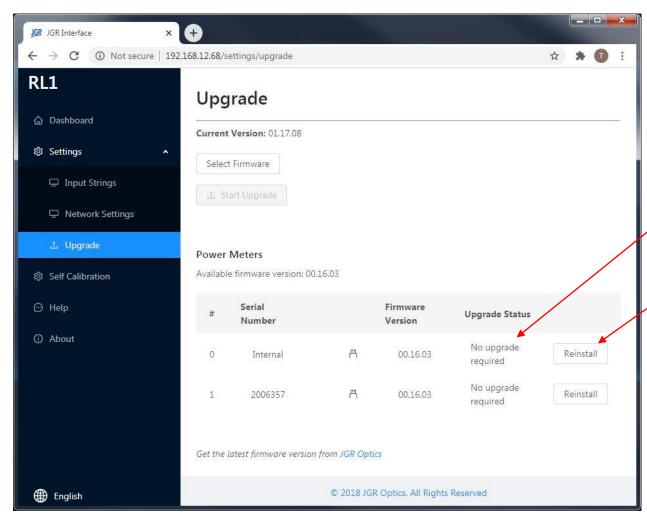

Once the upgrade is complete, the RL1 will reboot and the RL1 webpage will automatically refresh.

If any of the power meters required a firmware upgrade, the status will be indicated on this page.

If required, click the *Upgrade* or *Reinstall* button.

The power meter firmware is stored on the RL1 so no other file is required.

Similarly to the RL1 upgrade process, do not interrupt the power meter firmware upgrade while it is in progress.

